



750 Eastcoast St South • Lake Worth, FL 33460
561-588-6630 • Fax: 561-585-4141
www.uprproducts.com • sales@uprproducts.com

2003-88-05

UPR 05-14 Spherical Bushing

- 1) Remove the old bushing. We suggest soaking it with Liquid Wrench or a similar product to loosen it before removal. Using a small sledge hammer, drive the old bushing inward to loosen it. Then hammer it back out.
- 2) Clean the rust & paint from the housing bore using sandpaper or scotch-brite.
- 3) Remove the retainer ring / nut new bushing. Tap the new bushing into the rear end evenly until it seats.
(putting the bushing in the freezer for a few hours will help it to install easier)
- 4) Apply loctite to bushing threads. Screw on retainer ring and tighten with pliers.

Product Liability Statement: The purchase of the product, manufactured by UPR Products Inc. completes an agreement between UPR Products Inc. and the customer. UPR Products Inc. assumes no liability for damages or injury incurred by the buyer of this product. The purchaser or user of this product is responsible for the proper disposal of any hazardous materials (oil catch can contents). The buyer has complete responsibility for the installation, use and upkeep of this product.

Be sure to shop our online store for the best deals: www.uprproducts.com