



---

## A/C Eliminator Kit

1. Before getting started you must make sure your air condition system has had the Freon evacuated from the system. If it has not leaked out over time then bring it to a certified auto center to have it drained properly. Do not take it upon yourself to vent it into the atmosphere.
2. Disconnect the two A/C lines going into the compressor by using a large adjustable wrench then set them to the side. These can either be removed completely along with the rest of the A/C components or zip tied out of the way of any moving parts or exhaust.
3. Disconnect the electrical plug going into the top of the compressor. This wiring can be followed back to the main harness and removed or zip tied out of the way.
4. Remove the serpentine belt.
5. While facing the front of the engine remove the 1 bolt just above the A/C compressor pulley and 2 bolts below the pulley with a ½" socket.
6. Remove the two lower rear bolts, which are the only two bolts holding the A/C compressor in place.
7. Remove the A/C compressor.
8. Install the A/C eliminator by lining up the three bolts from the front using the supplied hardware from the kit.
9. Reinstall the belt.