



Coyote Remote Filter Adapter Installation Notes

Includes:

- 1 - Oil Filter Adapter
- 3 - O-Rings
- 3 - Socket Head Cap Screws

- This adapter replaces the factory oil filter mount on the front driver side of the Coyote block and will require the use of a remote mount oil filter mount (not included) and lines (not included).
- Adapter Inlet and Outlet ports are labeled on the adapter and both use 10AN ORB fittings.
- Adapter has 2 – ¼” NPT ports one for an oil pressure sensor and the other can be used for an oil drain back. If not using these ports they must be capped off with a plug. Use Teflon tape on sensor, adapter fittings or plugs going into these ports. Either of these ports can be used for the oil pressure sensor.
- On the back of the adapter there are three o-ring grooves. The provided o-rings must be used in all three for proper sealing and for adapter to sit flush against the block. Use a drop or two of oil on the o-rings when installing.
- The three socket head cap screws can be torqued to 18ft lbs (24 n-m)