



INSTALLATION INSTRUCTIONS

Part Number: E-0630

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

* FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal *

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® Filtercharger® seals properly.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

INSTALLATION:

- 1.) Open and remove the air filter housing lid.
- 2.) Remove the screw that holds the inlet tube in place.
- 3.) Loosen the hose clamp and lift the OE filter enough to remove the filter from housing.
- 4.) Install the K&N air filter onto the inlet tube.
- 5.) Rotate the K&N air filter so the tab is at the bottom and the notch on the air filter top is upright.
- 6.) Tighten the hose clamp.
- 7.) Reinstall the screw to secure the inlet tube.
- 8.) Reinstall the air filter housing lid.

NOTE: YOU MUST INSTALL THE AIR FILTER HOUSING LID TO AVIOD A CHECK ENGINE LIGHT.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8



Fig. 9

CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.