


10-13 Camaro V6 UPR Oil Catch Can Installation

10-13 Camaro V6 Assembly & Installation Instructions:

1. Install the steel mesh into the inlet chamber side of the top of the can and leave the outlet empty then install the screen and O-ring to hold it in. (Inlet side is the side coming from the valve cover).
2. Screw in the pipe plug or petcock into the bottom of the can.
3. Install the mounting bracket to the oil catch can lid using the supplied Allen head bolt and key.
4. Install the bottom of the can to the top.
5. Install the 3/8 fittings into the side of the can.
6. Determine mounting location and bolt the can into place. The recommend location is the front of the engine cover on the passenger side as seen in the picture below. An alternative location is to use the stud on the air box on the driver side.
7. Remove the engine cover.
8. Locate the plastic hose going across the top of the intake and cut hose leaving approximately 2" of the plastic line on each end.
9. Using the provided hose connect the outlet side of the can to the hose on the top of the intake nearest to the throttle body. Soap and water works well to help slip this hose on.
10. Using the remaining hose connect the inlet side of the can to the hose at the back of the intake that you had cut.

NEVER RETURN OIL FROM THE CATCH CAN BACK INTO THE ENGINE

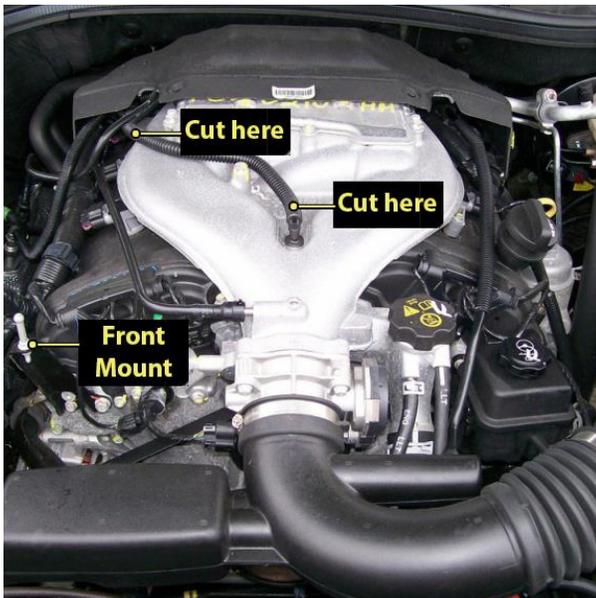

Be sure to shop our online store for the best deals: www.uprproducts.com