


UPR Oil Catch Can hose assembly

Once the hose is cut to length, slide the UPR Billet Hose End Ferrule onto the hose.

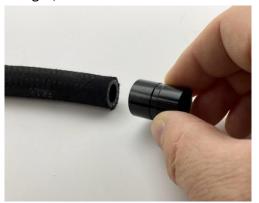

Push the Hose End Fitting into the hose until it is flush with the Hose End Ferrule



When installing check valves, be sure to note the direction of flow. UPR check valves have arrows printed on them. **The arrow always faces AWAY from the catch can** when installed in the vacuum hose.



Install the appropriate fitting into the engine side of the hose assembly to complete the installation.





To remove and service the catch can, press the buttons on the fittings to release them from the catch can (**NEVER pry or remove the buttons from the fittings**), Unscrew the quick release mounting knob, and remove the catch can. Unscrew the catch can cup to dispose of the liquid. Clean the catch can cup, body and filter with warm water and dish soap as needed. Vehicles using E85 will need to have the

<u>Product Liability Statement:</u> The purchase of the product, manufactured by UPR Products Inc. completes an agreement between UPR Products Inc. and the customer. UPR Products Inc. assumes no liability for damages or injury incurred by the buyer of this product. The buyer has complete responsibility for the installation, use and upkeep of this product.

tank cleaned and serviced more often than vehicles using gasoline.

Be sure to shop our online store for the best deals: www.uprproducts.com