


UPR Products Billet Oil Dip Stick Handle Installation

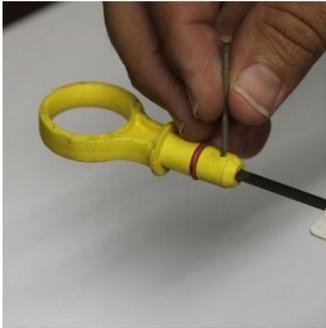

Using the included paneling nail and a hammer push the factory dipstick pin out of the handle releasing the handle from the dipstick.



The Billet handle will have two holes in it for the pin. Use the correct hole based on your engine. 96-04 Cobras & 96-98 GTs use the top hole and 99-11 GTs use the lower hole.




Slide the dipstick into the handle and line up the hole in the dipstick with the hole in the handle then place the new pin in place and tap it in with a hammer.



New assembly complete and ready to install in your car.

UPR Products Billet Oil Dip Stick Handle Installation

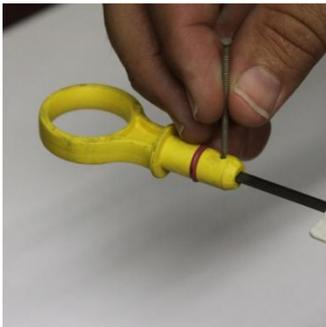

Using the paneling nail and hammer push the factory dipstick pin out of the handle releasing the handle from the dipstick.



The Billet handle will have two holes in it for the pin. Use the correct hole based on your engine. 96-04 Cobras & 96-98 GTs use the top hole and 99-11 GTs use the lower hole.



Slide the dipstick into the handle and line up the hole in the dipstick with the hole in the handle then place the new pin in place and tap it in with a hammer.



New assembly complete and ready to install in your car.