


UPR S550 Billet Upper Shock Mount Installation

Install the spacer onto the shock stud. Push shock stud into the mount, and secure with the nut. Torque to 35Lb ft.

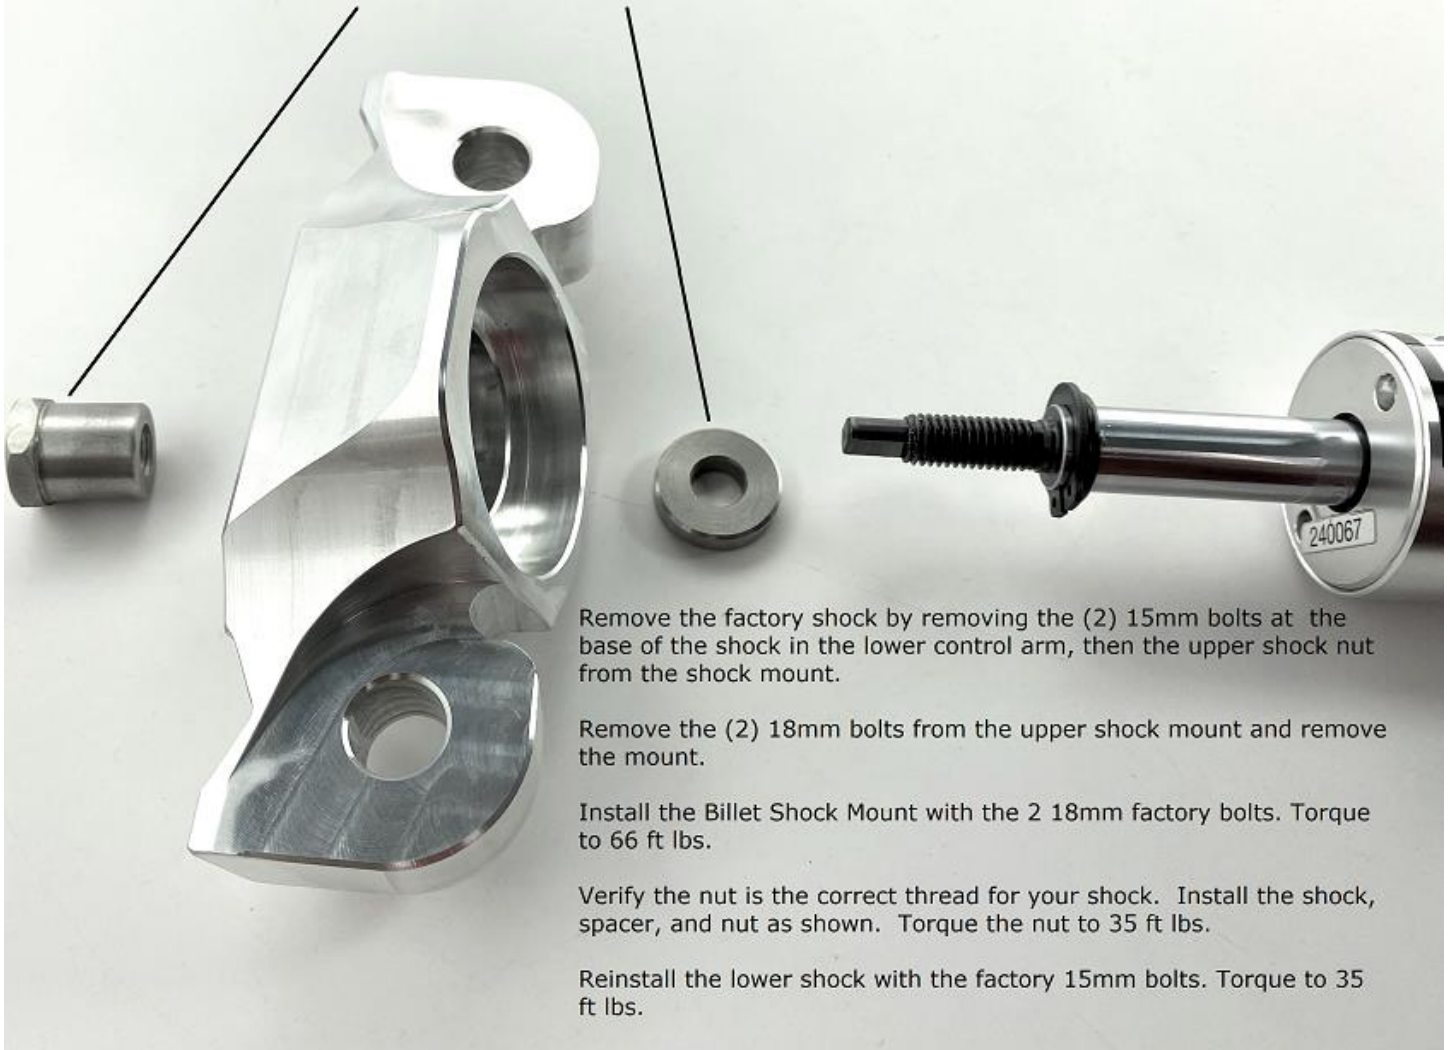

Remove the factory shock by removing the (2) 15mm bolts at the base of the shock in the lower control arm, then the upper shock nut from the shock mount.

Remove the (2) 18mm bolts from the upper shock mount and remove the mount.

Install the Billet Shock Mount with the 2 18mm factory bolts. Torque to 66 ft lbs.

Verify the nut is the correct thread for your shock. Install the shock, spacer, and nut as shown. Torque the nut to 35 ft lbs.

Reinstall the lower shock with the factory 15mm bolts. Torque to 35 ft lbs.

Product Liability Statement: The purchase of the product, manufactured by UPR Products Inc. completes an agreement between UPR Products Inc. and the customer. UPR Products Inc. assumes no liability for damages or injury incurred by the buyer of this product. The purchaser or user of this product is responsible for the proper disposal of any hazardous materials. The buyer has complete responsibility for the installation, use and upkeep of this product.

Be sure to shop our online store for the best deals: www.uprproducts.com