


## 2018 Mustang GT One-Way Breather

- \*\*\* Make sure engine is cooled off as the oil cap may be too hot to touch with your hand \*\*\*
- 1. Pull the latch to pop your hood and use the prop rod to keep it up so you can access the factory oil cap and filter tube.

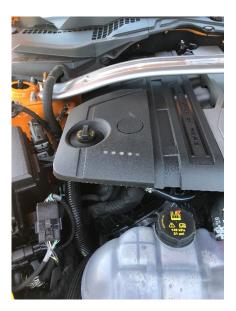


2. Remove factory oil cap from passenger side cover



Be sure to shop our online store for the best deals: www.uprproducts.com



3. With lifting up on the engine cover, use your other hand to carefully twist the oil cap filler tube counter clockwise to remove it from the valve cover.

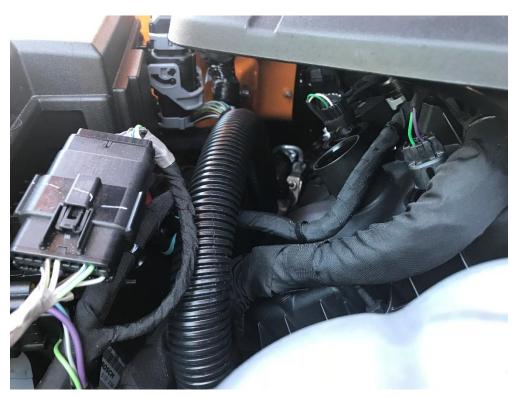

This is what you will have removed



Be sure to shop our online store for the best deals: www.uprproducts.com





4. Insert the UPR Products One-Way Breather onto the valve cover. Make sure to line up the cam-lock and twist in a clockwise movement.



\*\*\*

PUT THE STOCK OIL CAP AND FILLER TUBE IN A SEAL BAG AND KEEP HANDLE AS YOU WILL NEED TO ADD INSTALL IT TO ADD OIL IF YOU HAVE THE STOCK ENGINE COVER ON IT (IF YOU ARE SUPERCHARGED, YOU WILL NOT NEED THIS TO ADD OIL.