

UPR 15-20 Mustang 2.3 EcoBoost Plug N Play™ SC Oil Catch Can Installation


5028-112

1. Mount catch can to the driver side shock tower tab as shown.


(Knob design and hose ends will vary from photos)



2. Locate the Factory PCV tube between the intake manifold and the engine block and remove it.

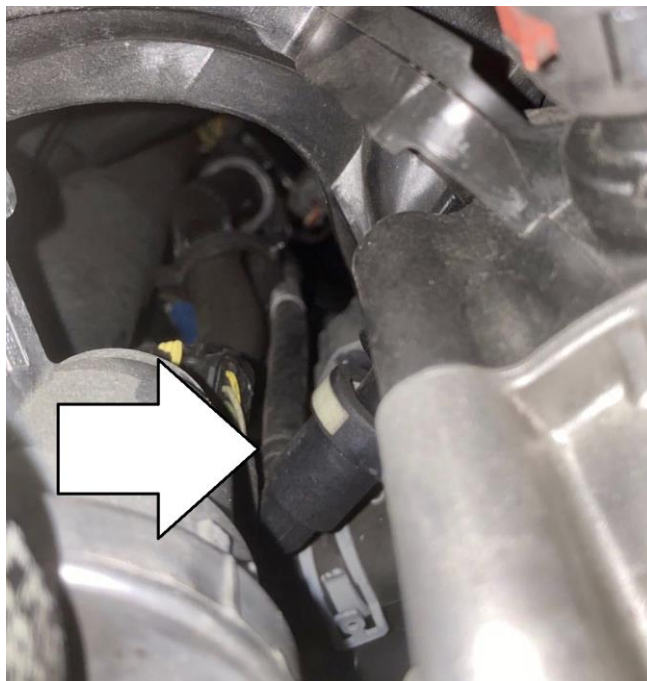

3. Route the UPR Plug N Play™ hoses as shown. 'Dirty side' from the PCV on the engine to the inlet on the catch can. 'Clean side' from the catch can to the vacuum fitting on the intake manifold.

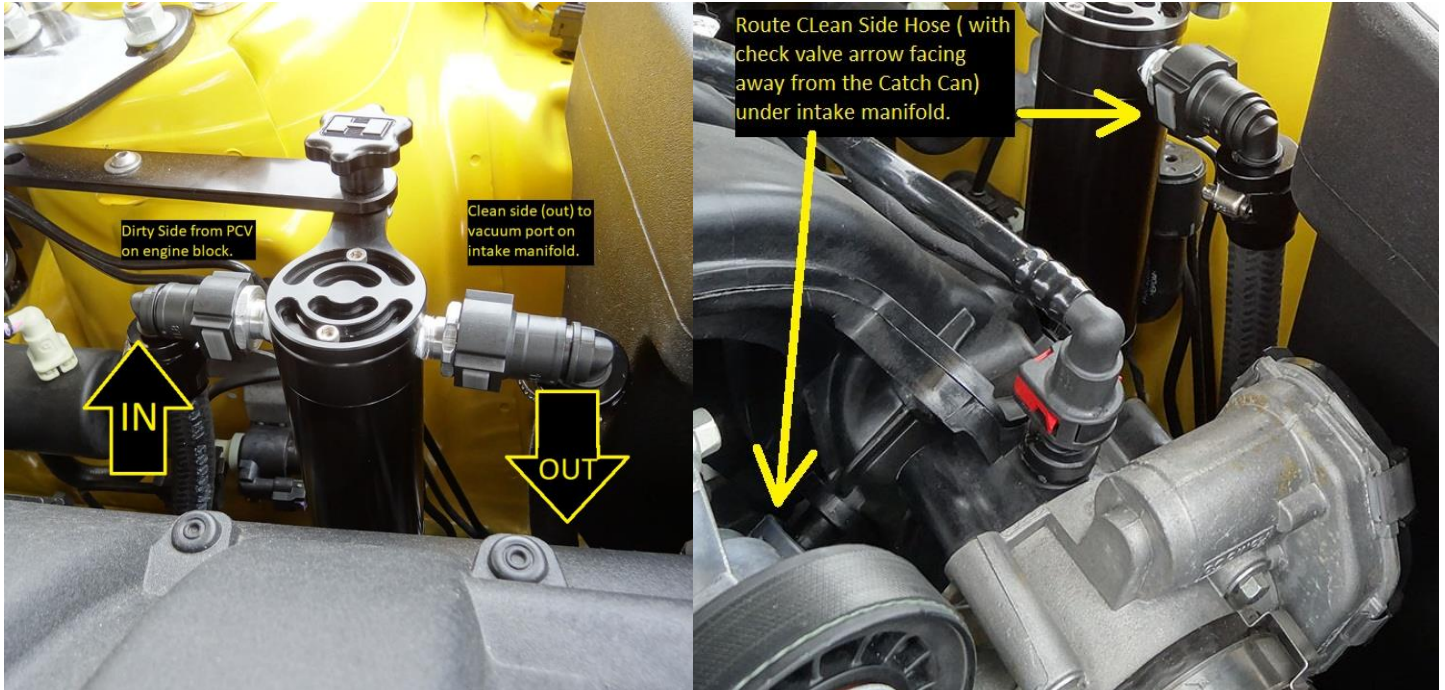

Always check and drain the catch can more often in winter / freezing weather. If the water/oil mixture in the catch can is allowed to freeze it will cause damage to the catch can and internal components. Any damage due to freezing is NOT WARRANTY. You must dispose of the liquid collected in the catch can properly (with used waste oil) properly according to your local laws.

Product Liability Statement: The purchase of the product, manufactured by UPR Products Inc. completes an agreement between UPR Products Inc. and the customer. UPR Products Inc. assumes no liability for damages or injury incurred by the buyer of this product. The purchaser or user of this product is responsible for the proper disposal of any hazardous materials (oil catch can contents). The buyer has complete responsibility for the installation, use and upkeep of this product.

Be sure to shop our online store for the best deals: www.uprproducts.com