


UPR 15-17 Dodge Hellcat PLUG N PLAY™ Clean Side Catch Instructions




1. Mounting bracket with nut and lock washer
2. Drive side strut tower stud where the AC lines are mounted.
3. Mount bracket on stud with washer and lock nut (10mm socket)
4. Mount catch can on bracket with washer and bolt (Incl. Allen Wrench)

Be sure to shop our online store for the best deals: www.uprproducts.com

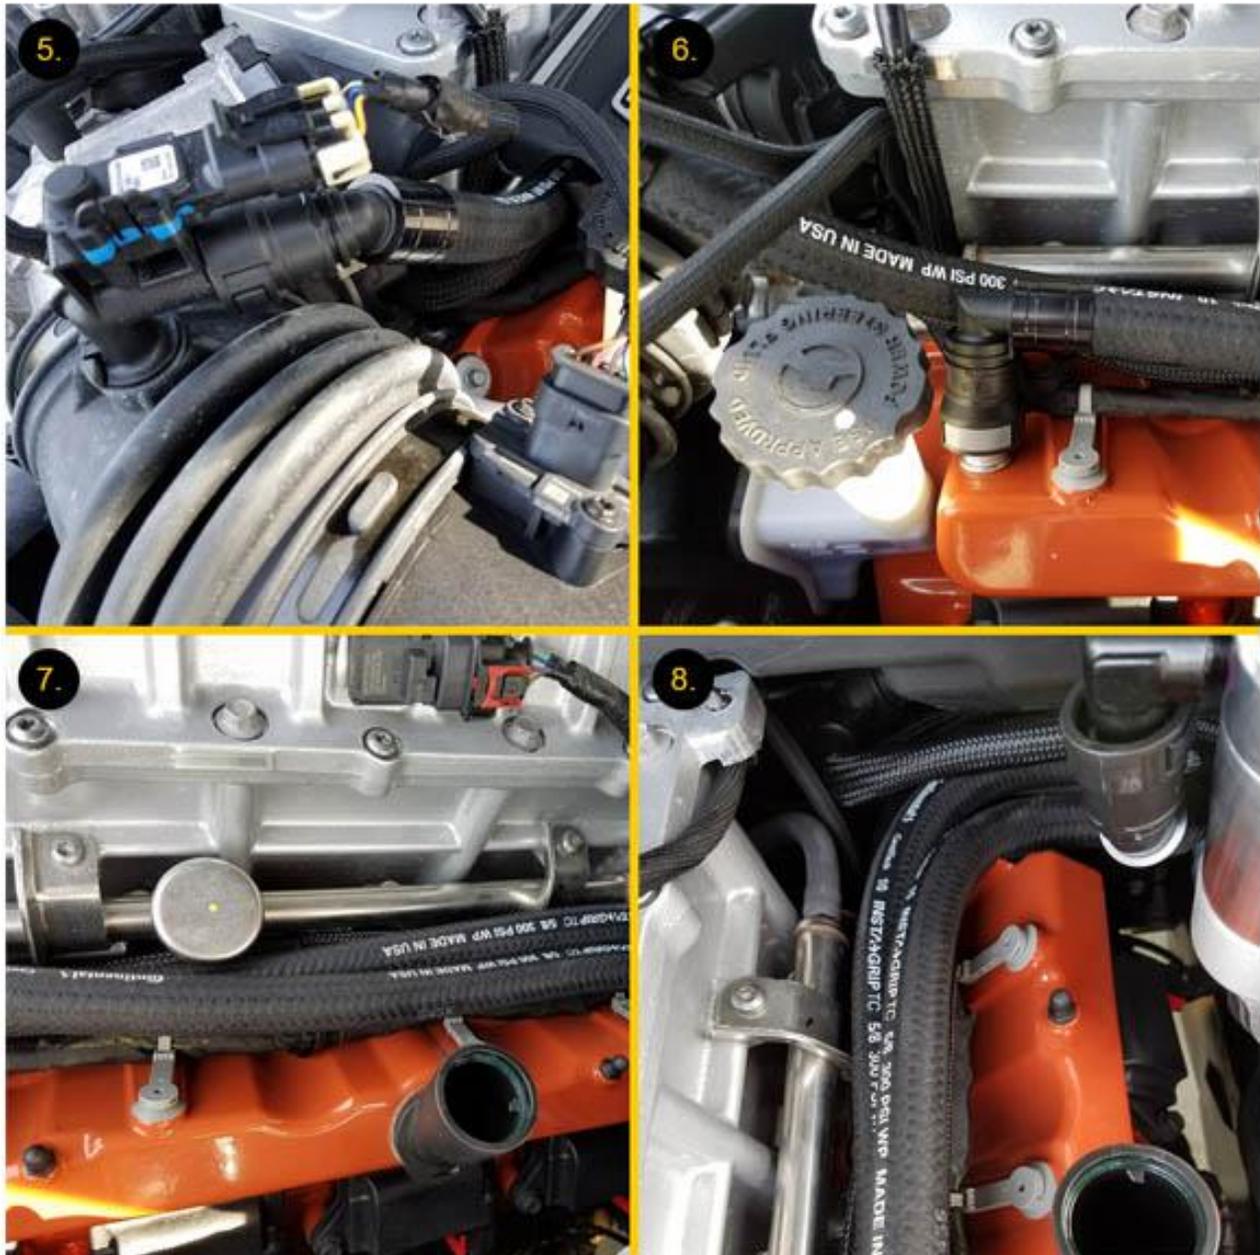

5. Mounting clean side hose with the 45 deg fitting to the intake tube.
6. Run the clean side line to the inside of the dirty side line.
7. Run both lines as pictured with clean side line under the dirty side line.
8. Clean side line on left loops with 45deg fitting to fitting pointing down.

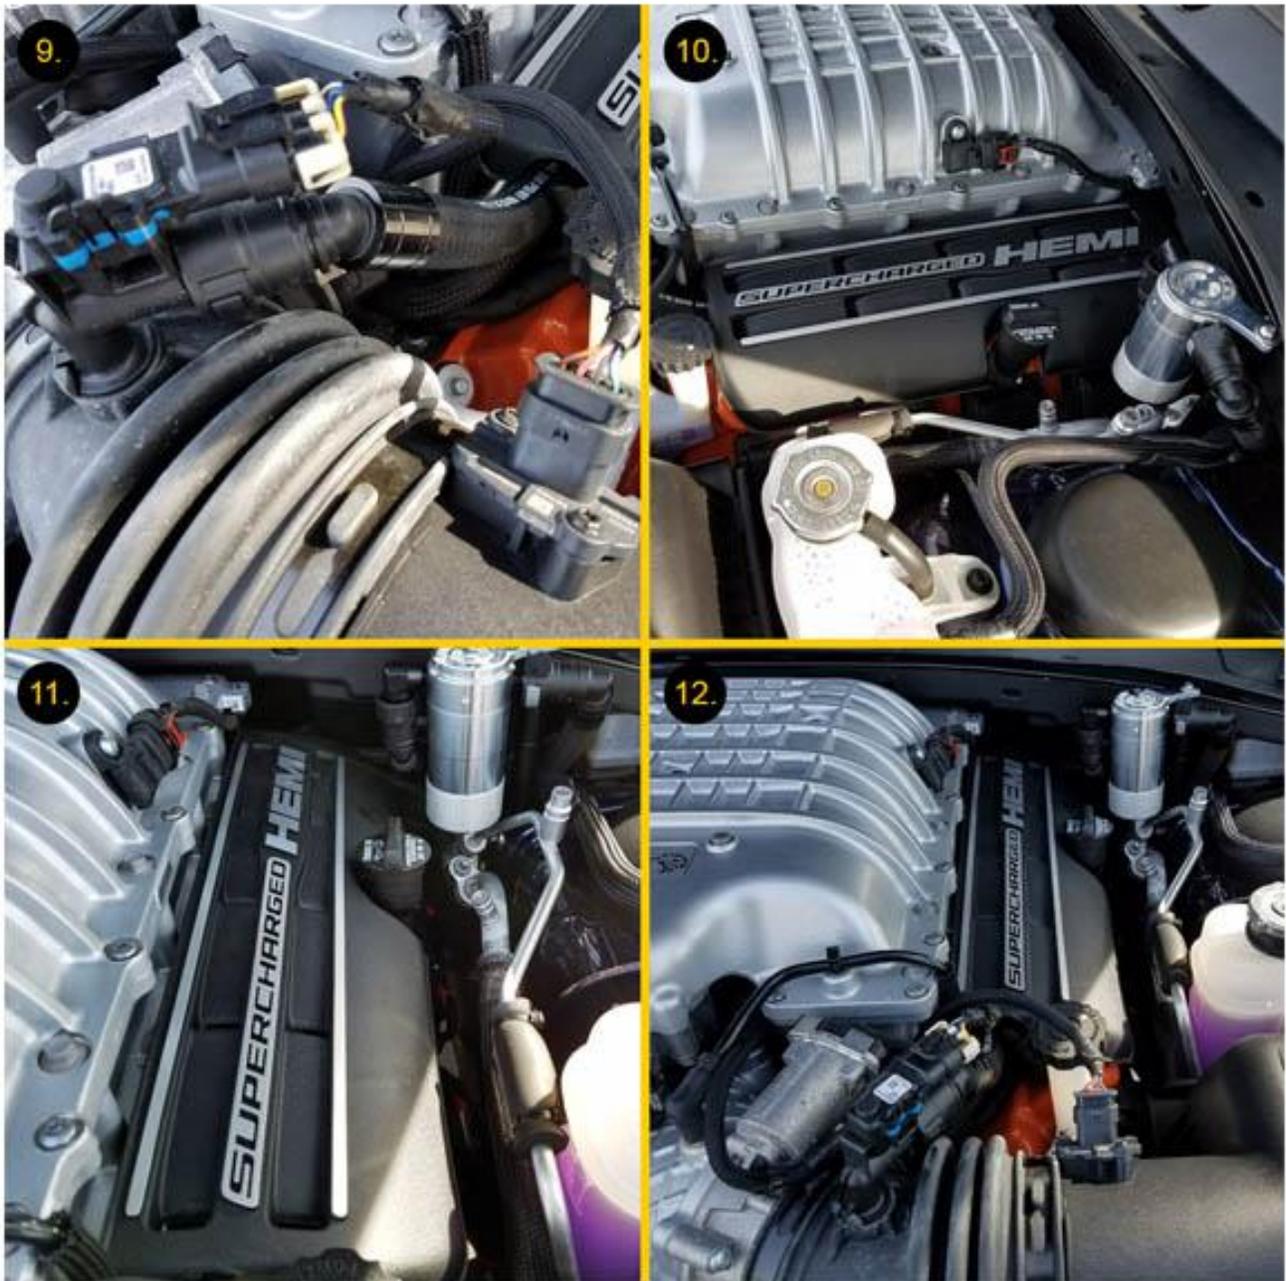

9. UPR Plug n Play™ 45 deg fitting with braided hose OEM style.
10. UPR Plug n Play™ 90 deg fittings on driver side of catch can.
11. Both Plug n Play™ braided lines completely hidden under coil cover.
12. Completed installation with a UPR Plug n Play™ catch can system.