


UPR Dual Inlet Oil Breather Tank Installation 15-20 F150 5.0



1. Remove the bolt at the top driver side of the radiator mount. Install the UPR bracket with the supplied bolt.

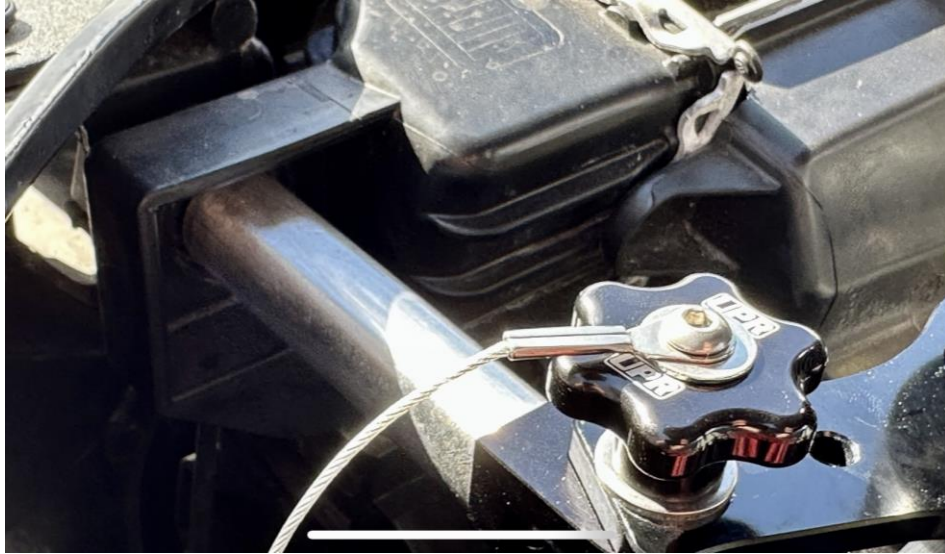

2. Install the UPR breather tank onto the bracket with the supplied Knob. The allen screws on the top bracket can be loosened to allow you to clock the breather tank into the best position. Tighten the screws and knob once you are happy with the fit.



3. The longest hose will run from the passenger side valve cover PCV fitting to the straight fitting on the breather tank (It is recommended to replace the factory PCV with an Open PCV UPR part number 5045-01 or remove the valve mechanism from your factory PCV). The shorter hose will connect from the driver side valve cover to the 90 degree fitting on the breather tank. The UPR hose ends will click on when fully engaged. Be sure to secure hoses so they cannot come into contact any hazards like belts, pulleys, or hot exhaust components.



Always check and drain the catch can more often in winter / freezing weather. If the water/oil mixture in the catch can is allowed to freeze it will cause damage to the catch can and internal components. Any damage due to freezing is NOT WARRANTY. You must dispose of the liquid collected in the catch can properly (with used waste oil) properly according to your local laws.

Product Liability Statement: The purchase of the product, manufactured by UPR Products Inc. completes an agreement between UPR Products Inc. and the customer. UPR Products Inc. assumes no liability for damages or injury incurred by the buyer of this product. The purchaser or user of this product is responsible for the proper disposal of any hazardous materials (oil catch can contents). The buyer has complete responsibility for the installation, use and upkeep of this product.

Be sure to shop our online store for the best deals: www.uprproducts.com