


## UPR Oil Catch Can Installation Ram TRX Fender Mount Catch Can


1. Remove the bolt holding the passenger side fender brace, Install the UPR Billet bracket in this location.

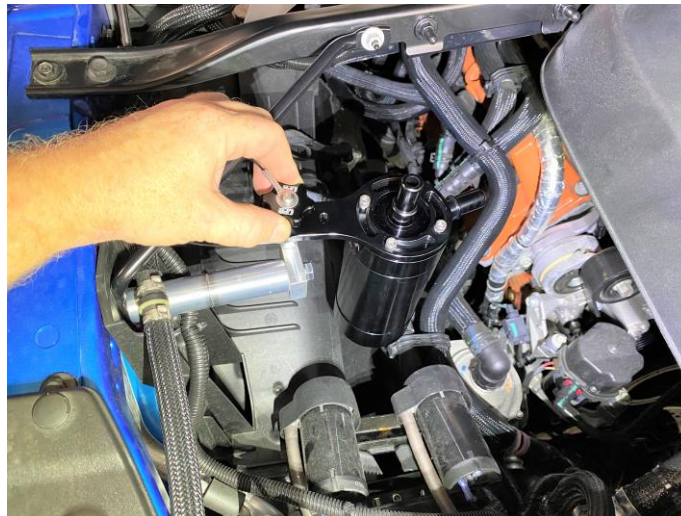

2. Install the UPR catch can using the supplied quick release knob.



3. Remove the Factory PCV hose. It connects from the passenger side valve cover fitting to the supercharger vacuum fitting.

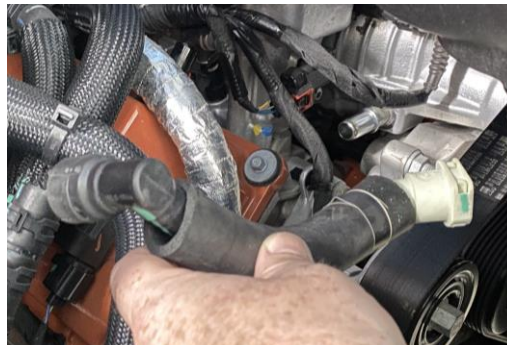

- The 'Clean Side' hose will have 45 degree fittings on both ends. Connect one end to the supercharger vacuum fitting and the other end to the side fitting on the catch can. The UPR Plug N Play fittings will click on when fully engaged. To remove the fittings, push the grey buttons (never pry them out), wiggle the fitting, and pull it off.



- The 'Dirty Side' Hose will have 90 degree fittings on both ends. Connect one end to the valve cover fitting, and the other to the top fitting on the catch can.



Always check and drain the catch can more often in winter / freezing weather. If the water/oil mixture in the catch can is allowed to freeze it will cause damage to the catch can and internal components. Any damage due to freezing is NOT WARRANTY. You must dispose of the liquid collected in the catch can properly (with used waste oil) properly according to your local laws.

***Product Liability Statement:** The purchase of the product, manufactured by UPR Products Inc. completes an agreement between UPR Products Inc. and the customer. UPR Products Inc. assumes no liability for damages or injury incurred by the buyer of this product. The purchaser or user of this product is responsible for the proper disposal of any hazardous materials (oil catch can contents). The buyer has complete responsibility for the installation, use and upkeep of this product.*