


GM LS (4.8, 5.3, 6.0) Truck SUV UPR Oil Catch Can Installation

GM Truck SUV Assembly & Installation Instructions:

1. Install the steel mesh into the inlet chamber side of the top of the can and leave the outlet empty then install the screen and O-ring to hold it in. (Inlet side is the side coming from the valve cover).
2. Screw in the pipe plug or petcock into the bottom of the can.
3. Install the mounting bracket to the oil catch can lid using the supplied Allen head bolt and key.
4. Install the bottom of the can to the top.
5. Install the 3/8 fittings into the side of the can.
6. Using the factory fender bolt mount the can on the driver side fender (see below).
7. Install one hose to the top of the intake and then to the outlet side of the catch can (see below).
8. Install the other hose to the plastic line going to the back of the valve cover and then to the inlet side of the catch can (see below)

NEVER RETURN OIL FROM THE CATCH CAN BACK INTO THE ENGINE

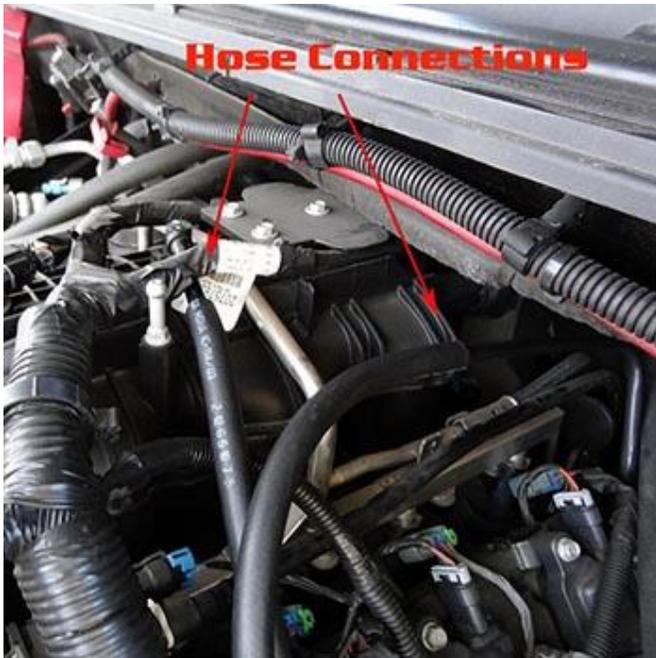

Be sure to shop our online store for the best deals: www.uprproducts.com