


05-13 Corvette UPR Oil Catch Can Installation

05-13 Corvette Assembly & Installation Instructions:

1. Install the mounting bracket to the oil catch can lid using the supplied Allen head bolt and key.
2. Install the 3/8 fittings into the side of the can and rotate them so they face towards the engine.
3. Remove the factory passenger engine cover.
4. At the passenger side front of the intake manifold, you will see a short looped hose that connects from the intake manifold vacuum port to a fitting on the lifter valley cover. This is the crank case to intake vent tube, remove the hose.
5. Locate the bolt in the front of the passenger side cylinder head at the top, the only thing this bolt holds up is a ground wire.
6. Remove that bolt (13mm socket) from the head.
7. Using the provided bolt mount the catch can to the front of the head with the fitting facing the engine. The round spacer goes between the bracket and cylinder head. Make sure the ground strap stays attached to the head.
8. Connect the inlet side of the can (fitting facing the front of the car) to the engine valley cover port (**see picture below**) and the outlet side (fitting facing the back of the car) to the intake manifold.
9. Double check your connections, level the catch can and tighten the mounting bolt.
10. Press the fuel rail cover back into place.

NEVER RETURN OIL FROM THE CATCH CAN BACK INTO THE ENGINE

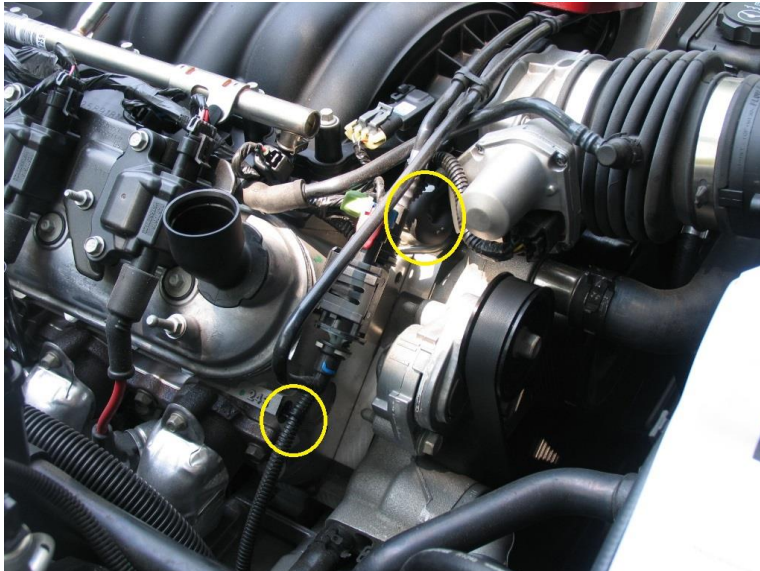

Be sure to shop our online store for the best deals: www.uprproducts.com

