

UPR 17-18 Jeep Wrangler JL 3.6 Plug n Play Catch Can Installation



1. Remove Factory Engine Cover



2. Remove PCV line from passenger side rear of engine (Push Button on fitting to release)




3. Remove PCV line from driver side of engine behind TB (Push Button on fitting to release)




4. Install UPR Catch Can Mounting Bracket on the empty hole on manifold behind oil cap.



5. Mount your UPR Catch Can on the mounting bracket securely.

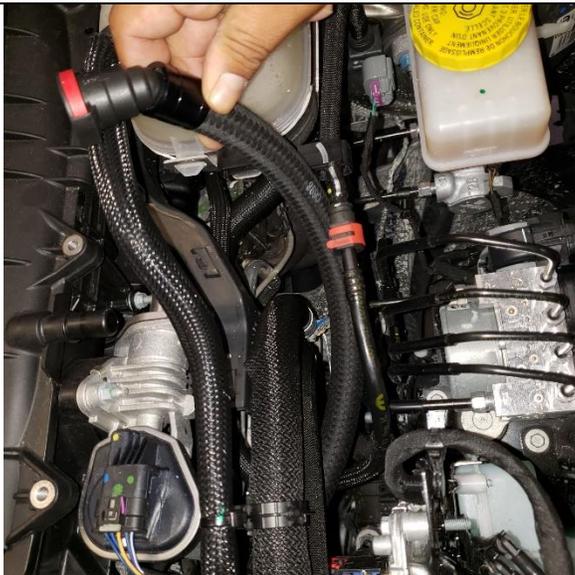

6. Run the Clean Line from the right side of the catch can to the manifold behind the throttle body. You will run the Under your throttle body and coolant overflow line, rotate fittings for best fit. (45° UPR plug n play fitting to the back of cylinder head and 45° fitting to the Catch Can)

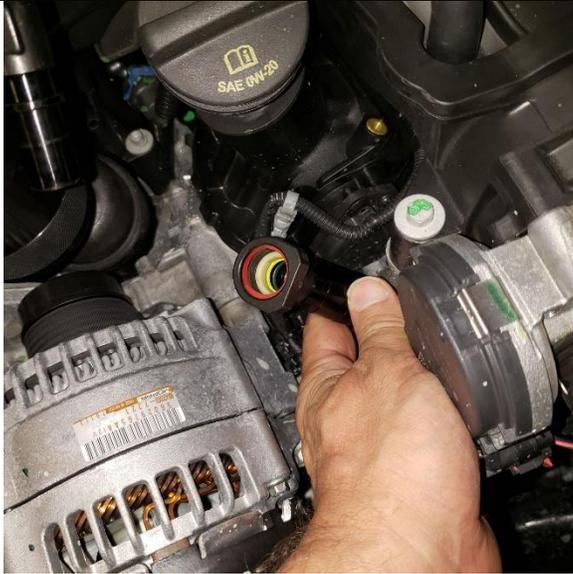

7. Run the Dirty Line from left side of the UPR Catch Can to rear of the passenger cylinder head. (45 Degree UPR plug n play fitting to the back of cylinder head and 90° fitting to the catch can)



8. Now reinstall your engine cover and final check all your connections.

9. When you tighten the UPR Catch Can bottom be sure to gently snug it as the O-ring will lock it securely in place. Overtightening will potentially lock the catch can closed as it was designed to be opened and closed with very little effort.