


## UPR Ecoboost 2.3 Mustang, Ranger, and 3.0 Explorer ST Blow off Valve adapter Installation

AMP-85500-01



1. Locate the factory blow off valve. Disconnect the wiring harness and remove the 3 attaching screws.

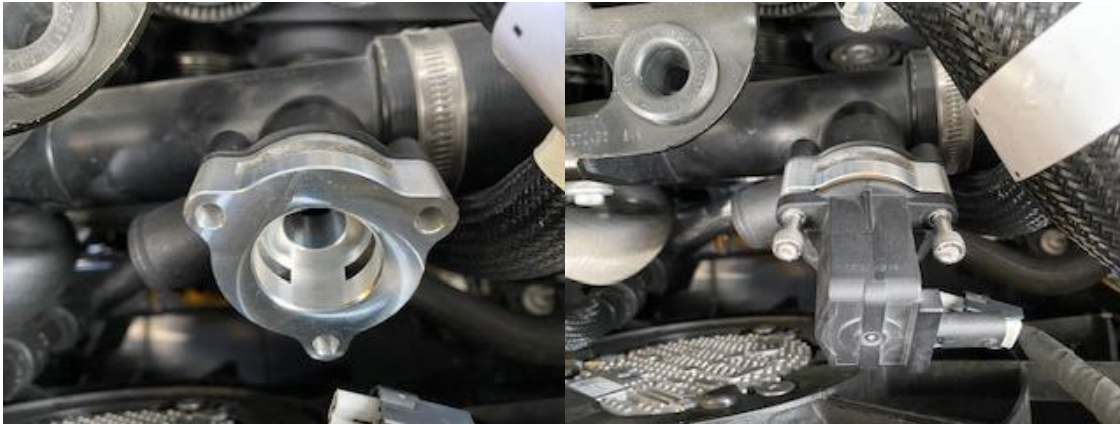

2. Remove the factory blow off valve, and install the BOV adapter. The holes will only line up one way. Use the machine screws for Mustang and Ranger, use coarse screws for Explorer ST, or other applications where the machine screw will not easily thread into. Reinstall the factory BOV, secure with the supplied hardware and reconnect the wiring harness.

***Product Liability Statement:** The purchase of the product, manufactured by UPR Products Inc. completes an agreement between UPR Products Inc. and the customer. UPR Products Inc. assumes no liability for damages or injury incurred by the buyer of this product. The buyer has complete responsibility for the installation, use and upkeep of this product.*

**Be sure to shop our online store for the best deals: [www.uprproducts.com](http://www.uprproducts.com)**