


## Segway / Sur Ron E-Dirt Bike Billet Rear Suspension Lift Link – Instructions

### EB-105, EB-106, EB-107




Support the E bike on a stand or lay it on the ground to take weight off of the suspension. Use an 8mm Allen key and a 13mm socket or wrench to remove the 3 fasteners, and remove the stock link. (Some earlier SurRons use a 12mm nut)

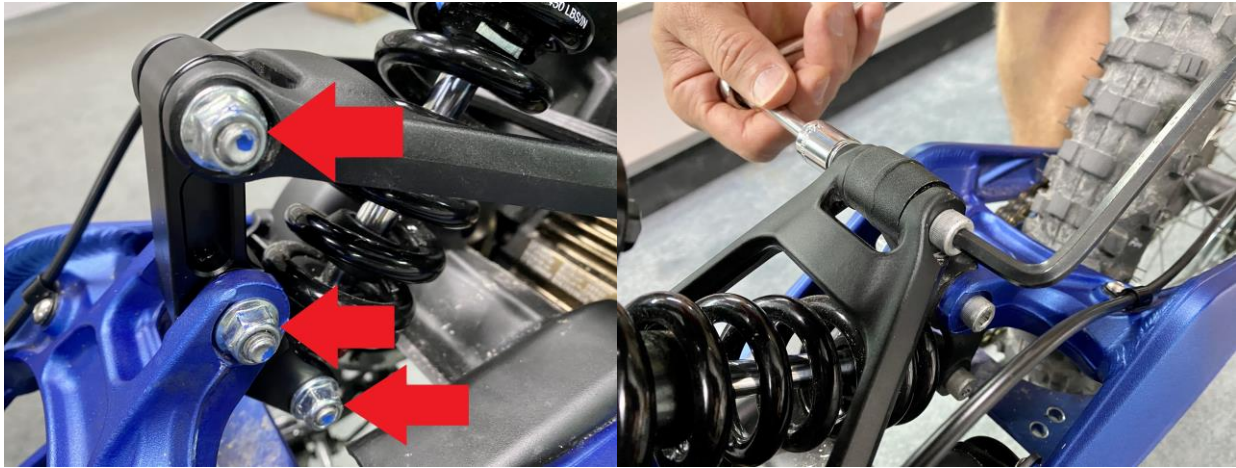

Removing the lower shock bolt is made easier by rotating the shock which will allow the bolt to come out without interfering with the swing arm.

Remove the bushings from the original link. They will push out by hand. Insert them into the new link. Install the nylon dust caps before installing the new link.

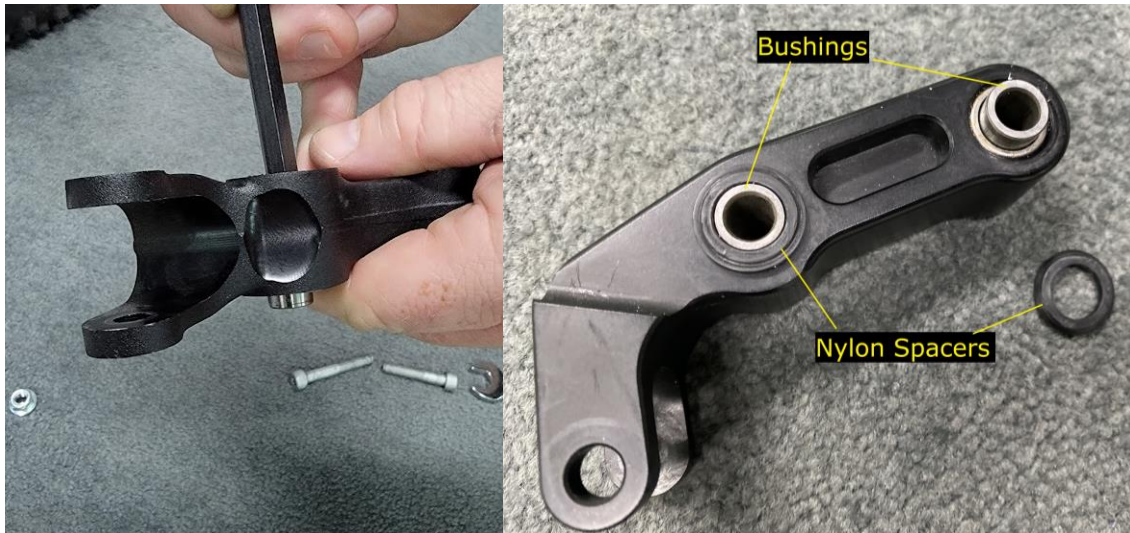

Installation of the new link is the reverse order of removal. Install the new link onto the shock and rotate back into position. Insert the link back into the swing arm then into the triangle link. Do not tighten the hardware until all 3 bolts are installed.



Tighten the fasteners to 18-22 Ft-Lbs /25-30NM

**Product Liability Statement:** The purchase of the product, manufactured by UPR Products Inc. completes an agreement between UPR Products Inc. and the customer. UPR Products Inc. assumes no liability for damages or injury incurred by the buyer of this product. The buyer has complete responsibility for the installation, use and upkeep of this product

**Be sure to shop our online store for the best deals: [www.uprproducts.com](http://www.uprproducts.com)**