



TIG-VISION Race & Fab Shop (561) 281-2827

1979-2004 Ford Mustang Oil Pan Saver Instructions

- Remove back A arm nut and washer then two rear K-member bolts and washers. **Fig A**
- Place oil pan saver in place by lining up the A arm bolt first then re-install the two rear bolts but do not tighten. **Fig B**
- Re-install the washer and A arm nut and tighten.
- Tighten the rear K-member bolts and repeat the above steps on the other side. **Fig C**

Figure A

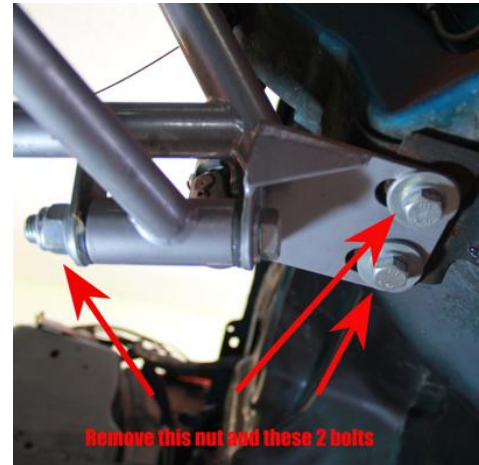


Figure B



Figure C

